

Important Safeguards

When using your light box, basic safety precautions should always be followed, including the following:

1. Read and understand all instructions.
2. Close supervision is necessary when any appliance is used by or near children. Do not leave appliance unattended while in use.
3. Care must be taken as burns can occur from touching hot parts.
4. Do not operate unit with a damaged cord, or if the unit has been dropped or damaged, until it has been examined by a qualified service technician.
5. Do not let cord hang over edge of table or counter or touch hot surfaces.
6. If an extension cord is necessary, a cord with a suitable current rating should be used. Cords rated for less amperage than the appliance may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
7. Always unplug the unit from electrical outlet when not in use. Never yank cord to pull out the plug from the outlet. Grasp plug and pull to disconnect.
8. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
9. To protect against electrical shock hazards, do not immerse this appliance in water or other liquids.
10. To reduce the risk of electrical shock, do not disassemble this appliance, but take it to a qualified service technician when some service or repair work is required. Incorrect assembly can cause electric shock when appliance is subsequently used.

Maintenance

1. If your light box is to be used for cutting, purchase a smooth edged piece of glass (slightly smaller than the size of the plastic top and up to 1/4" thick) from a glass dealer. Open the top angle pieces and insert the glass over the plastic top.
2. The plastic top is easily cleaned with a slightly damp cloth. DO NOT CLEAN WITH CARBON TETRACHLORIDE.